



Submittal Data: UTY-RNNUM

Wired Remote Controller

Job Name:	Date:
Location:	Approval:
Engineer:	Construction:
Submitted to:	Unit #:
Submitted by:	Drawing #:
Reference:	



Input Power.	12v DC
Dimensions H x W x D	
(in.)	4-3/4 x 4-3/4 x 11/16
(mm)	120 x 120 x 18
Weight	5.6 oz

Compatible with most wall mounted, ducted, small cassette, and floor mounted models. For compatibility listings, see full line brochure which lists which indoor units are compatible with this wired remote.

General Features:

- Operation modes: Auto/Cool/Dry/Fan/Heat
- •Various timer setup (On / Off / Weekly) are possible.
- •Off Timer
- Used to stop air conditioner operation. The timer operates and air conditioner operation stops after the set time has passed. Timer can be set up to 24 hours in advance.
- Used to start the air conditioner operation. Timer operates and air conditioner operation starts after the set time has passed. Timer can be set up to 24 hours in advance.
- •Weekly Timer
 - Start / Stop function is twice per day for a week.
 - Operating time can be set in 30-minute increments only.
 - The off time can be carried over to the next day.
- •Temperature Set Back Timer
- Used to change the set temperature in the operation times set for each day of the week. This can be used together with other timer settings.
- •When setting up a timer, start/stop and a temperature setup can be changed.
- •When a failure occurs, the error code is displayed.
- Temperature detection of the room can be selected at the indoor unit or on the wired controller by initiating the Thermo Sensor feature.
- ·Auto restart.
- Emergency function setting for power failure, etc.
- •33 feet of connectable thermostat wire.
- ·User-friendly operation
 - Large backlit screen
 - Large easy to use operation panel
- Multiple Function Settings
 - See Owner's Manual
- •Filter Lamp Reset
- Some indoor unit models are equipped with a filter lamp in the indoor unit's display to indicate when it is time to clean the air filters.



